

												BORNERA																								CABLE N°	02-154	02-174	02-227	02-237	02-287					
												EII-2L10												DESTINO												CABLE N°	12x1	12x1	12x1	7x1	7x1	7x1				
												T. PRUEBA	PUENTES	T. PRUEBA	BORNE N°	FUNCION	APARATO O BORNERA	BORNE	DESTINO	TP.EII	TP.EII	TP.B02	TP.FREC	BANCO II																						
												( )	=	( )	1	+Man.E21	E21L3	26		1																										
												( )	=	( )	2	Habilitar Recierre E21	E21L3	40		2																										
												( )	=	( )	3	Inhibir Recierre E21	E21L3	41		3																										
												( )	=	( )	4	+Man.E22	E22L3	26		4																										
												( )	=	( )	5	Habilitar Recierre E22	E22L3	40		5																										
												( )	=	( )	6	Inhibir Recierre E22	E22L3	41		6																										
												( )	=	( )	7	+Man.E23	E23L3	26		7																										
												( )	=	( )	8	Habilitar Recierre E23	E23L3	40		8																										
												( )	=	( )	9	Inhibir Recierre E23	E23L3	41		9																										
												( )	=	( )	10	+Man.E24	E24L3	26		10																										
												( )	=	( )	11	Habilitar Recierre E24	E24L3	40		11																										
												( )	=	( )	12	Inhibir Recierre E24	E24L3	41		12																										
												( )	=	( )	13	+Man.E25	E25L3	26			1																									
												( )	=	( )	14	Habilitar Recierre E25	E25L3	40			2																									
												( )	=	( )	15	Inhibir Recierre E25	E25L3	41			3																									
												( )	=	( )	16	+Man.E26	E26L3	26			4																									
												( )	=	( )	17	Habilitar Recierre E26	E26L3	40			5																									
												( )	=	( )	18	Inhibir Recierre E26	E26L3	41			6																									
												( )	=	( )	19	+Man.E27	E27L3	26			7																									
												( )	=	( )	20	Habilitar Recierre E27	E27L3	40			8																									
												( )	=	( )	21	Inhibir Recierre E27	E27L3	41			9																									
												( )	=	( )	22	+Man.E28	E28L3	26			10																									
												( )	=	( )	23	Habilitar Recierre E28	E28L3	40			11																									
												( )	=	( )	24	Inhibir Recierre E28	E28L3	41			12																									
												( )	=	( )	25	+Man.E20	B02L3AF	42				1																								
												( )	=	( )	26	Desbloqueo TAC E20	B02L3AF	56				2																								
												( )	=	( )	27																															
												( )	=	( )	28	+AL EII	EIIe6L3	14					1																							
												( )	=	( )	29	Adentro Rele Frecuencia EII	EIIe6L3	37					2																							
												( )	=	( )	30																															
												( )	=	( )	31	Habilitar Rele Frec.EII	EIIe6L3	39					3																							
												( )	=	( )	32	Bloquear Rele Frec.EII	EIIe6L3	41					4																							
												( )	=	( )	33	+Man. Banco II	EIIcLO	143						1																						
												( )	=	( )	34	AF a1 Banco II																														
												( )	=	( )	35	AD a1 Banco II																														
												( )	=	( )	36	AF a5 Banco II	EIIcLO	144						2																						
												( )	=	( )	37	AD a5 Banco II	EIIcLO	139						3																						
												( )	=	( )	38																															
												( )	=	( )	39																															
												( )	=	( )	40																															
												( )	=	( )	41																															
												( )	=	( )	42																															
												( )	=	( )	43																															
												( )	=	( )	44																															
												( )	=	( )	45																															
												( )	=	( )	46																															
												( )	=	( )	47																															
												( )	=	( )	48																															
												( )	=	( )	49																															
												( )	=	( )	50																															